



SmartyCam battery charger working only with the system on

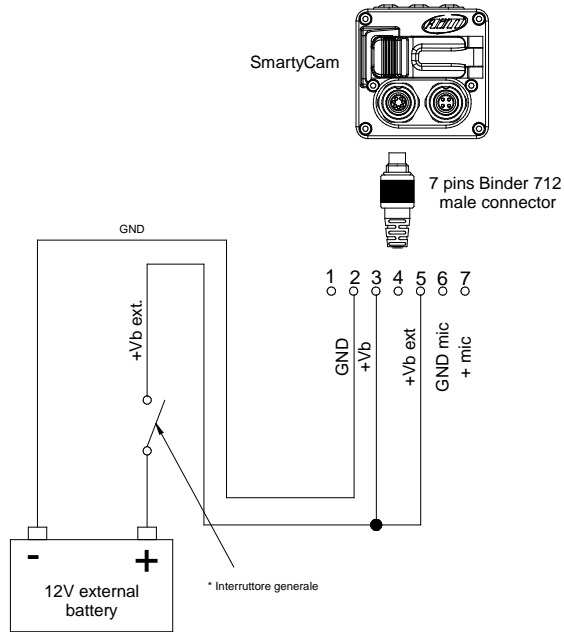

GND = Ground
 +Vb = Power on signal
 +Vb ext = 12V power and SmartyCam battery charger
 +mic = External microphone + signal
 GND mic = External microphone - signal

SmartyCam battery charger always working

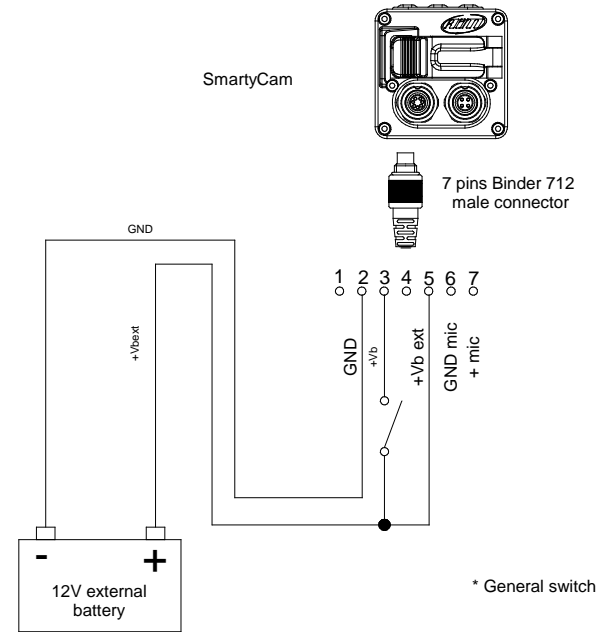

*Without the general switch SmartyCam powers on only if manually switched on and its battery charger is always working

Rif. / Ref.	Q.tà / Q.ty	Materiale / Material			N. articolo / Item N.	
Progettato da / Designed by	Contr. da / Ckd. by	Approvato da / Approved by	Nome file / File name		Data / Date	Scala / Scale
		Titolo / Title				
		Schema elettrico collegamento SmartyCam standalone				
N. disegno / Drawing N.		Rev. / Rev.	Foglio / Sheet		2 Binder	1 di 1