memotec®
Messtechnik

User Manual

AiM LCU1s | Lambda Module

BA

memotec GmbH
Bauwaldstrasse 1
D-75031 Eppingen

+49.7260.920440
info@me-mo-tec.de

www.me-mo-tec.de

User Manual

LCU1S

Release 1.01

INDEX

1 – Introduction 3
2 – Available kits, optionals and spare parts 3
3 – Configuring LCU1S 4
4 – How to get the serial number of a connected LCU1S 8
5 – Online view and firmware update 10
6 – Diagnostic codes in Race Studio Analysis 13
7 – Technical specifications and drawings 13

1 – Introduction

LCU1S is the new smaller, lighter and faster AiM Lambda Controller expansion supported by all the last car-bike AiM devices.

Please note: the only systems that does not support LCU1S are MXL, MXL2 and MyChron.

LCU1S allows you to perfectly tune the carburation of the engine as well as to improve the engine performances.

LCU1S uses a Bosch LSU4.9 probe that saves the original calibration for the duration of the sensor life and lasts for more that 100.000 km on a stock car.

2 – Available kits, optionals and spare parts

Available LCU1S kits are:

LCU1S complete kit; part number: **X08LCU1SAC090**

- LCU1S
- Bosch LSU 4.9 Lambda probe
- Thread iron ring for installation

LCU1S kit without Lambda probe; part number: **X08LCU1SAC0**

- LCU1S

Optionals7 and spare parts:

- Bosch LSU 4.9 Lambda probe **X05LSU490**
- Thread iron ring for installation **LBS552680**
- 50cm AiM CAN cable **V02552690**
- 100cm AiM CAN cable **V02552700**
- 200cm AiM CAN cable **V02552720**
- 400cm AiM CAN cable **V02551070**

3 – Configuring LCU1S

LCU1S can only be configured using AiM RaceStudio 3 software you can freely download from AiM website at www.aim-sportline.com download software/firmware area.
LCU1S is an expansion that is to be loaded on AiM device configuration so first of all run the software and select the configuration where to load LCUS1S on or create a new one as shown here below. To create a new configuration:

- Press “New Configuration” (**1**)
- Select the device you are configuring (Solo 2 DL v2 in the example below **2**)
- Press “OK” (**3**)

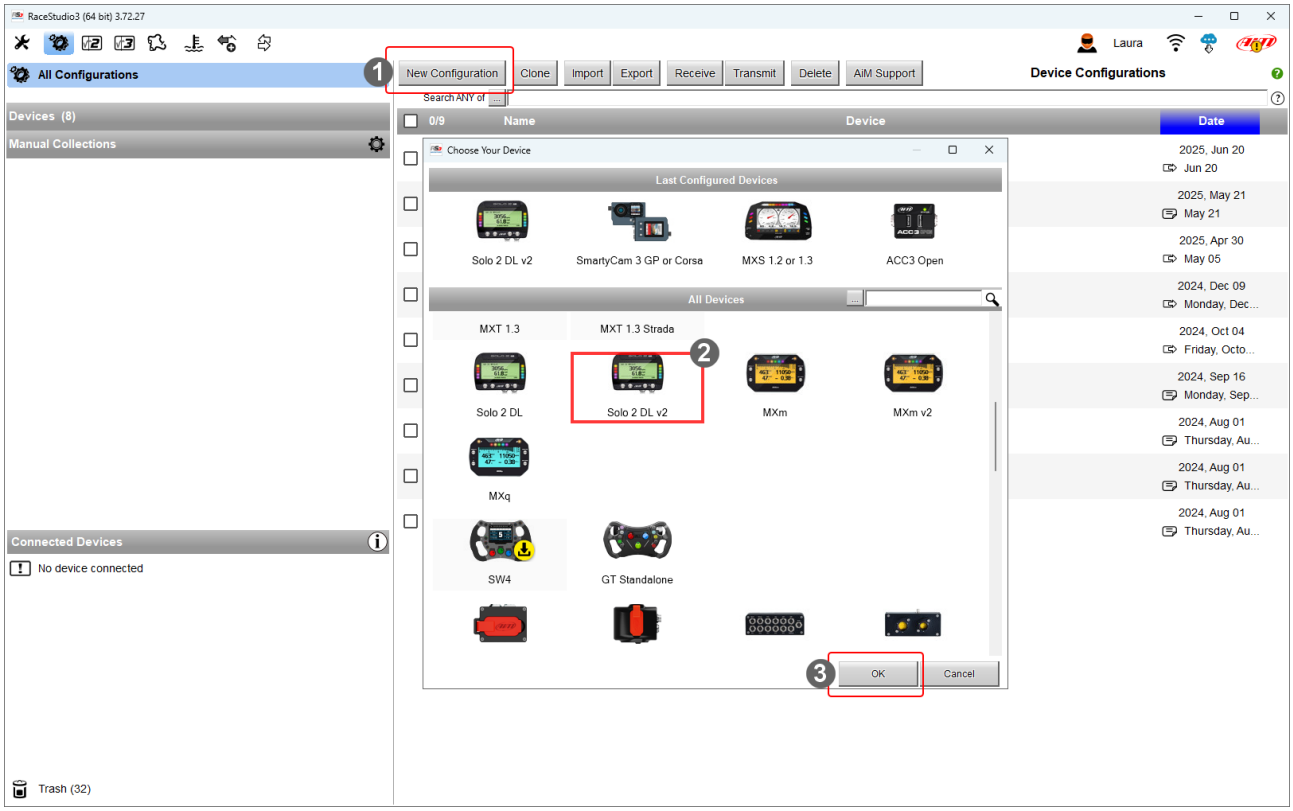

The software enters “Channels” tab.

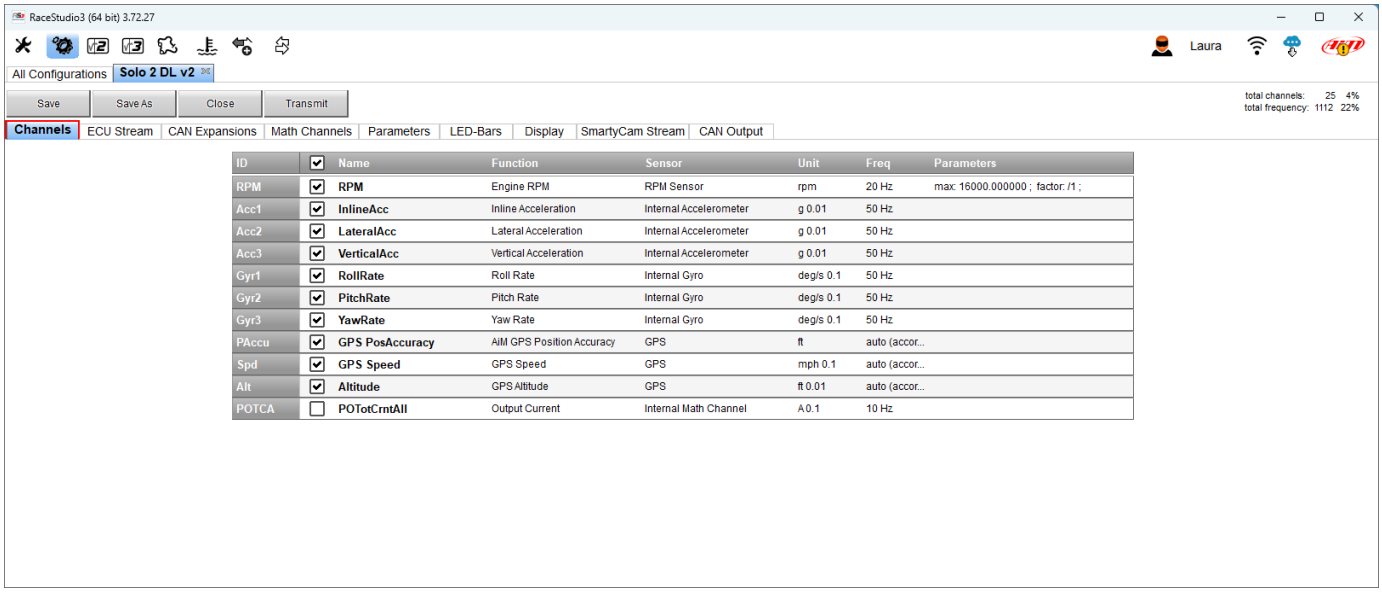

ID	Name	Function	Sensor	Unit	Freq	Parameters
RPM	RPM	Engine RPM	RPM Sensor	rpm	20 Hz	max: 16000.000000 ; factor: /1 ;
Acc1	InlineAcc	Inline Acceleration	Internal Accelerometer	g 0.01	50 Hz	
Acc2	LateralAcc	Lateral Acceleration	Internal Accelerometer	g 0.01	50 Hz	
Acc3	VerticalAcc	Vertical Acceleration	Internal Accelerometer	g 0.01	50 Hz	
Gyr1	RollRate	Roll Rate	Internal Gyro	deg/s 0.1	50 Hz	
Gyr2	PitchRate	Pitch Rate	Internal Gyro	deg/s 0.1	50 Hz	
Gyr3	YawRate	Yaw Rate	Internal Gyro	deg/s 0.1	50 Hz	
PAccu	GPS PosAccuracy	AiM GPS Position Accuracy	GPS	ft	auto (accor...	
Spd	GPS Speed	GPS Speed	GPS	mph 0.1	auto (accor...	
Alt	Altitude	GPS Altitude	GPS	ft 0.01	auto (accor...	
POTCA	POTotCrntAll	Output Current	Internal Math Channel	A 0.1	10 Hz	

To load LCU1S activate “CAN Expansions” (**1**) tab as shown here below and follow these steps:

- Press “New Expansion” (**2**)
- Select LCU1S (**3**)
- Press “OK” (**4**)

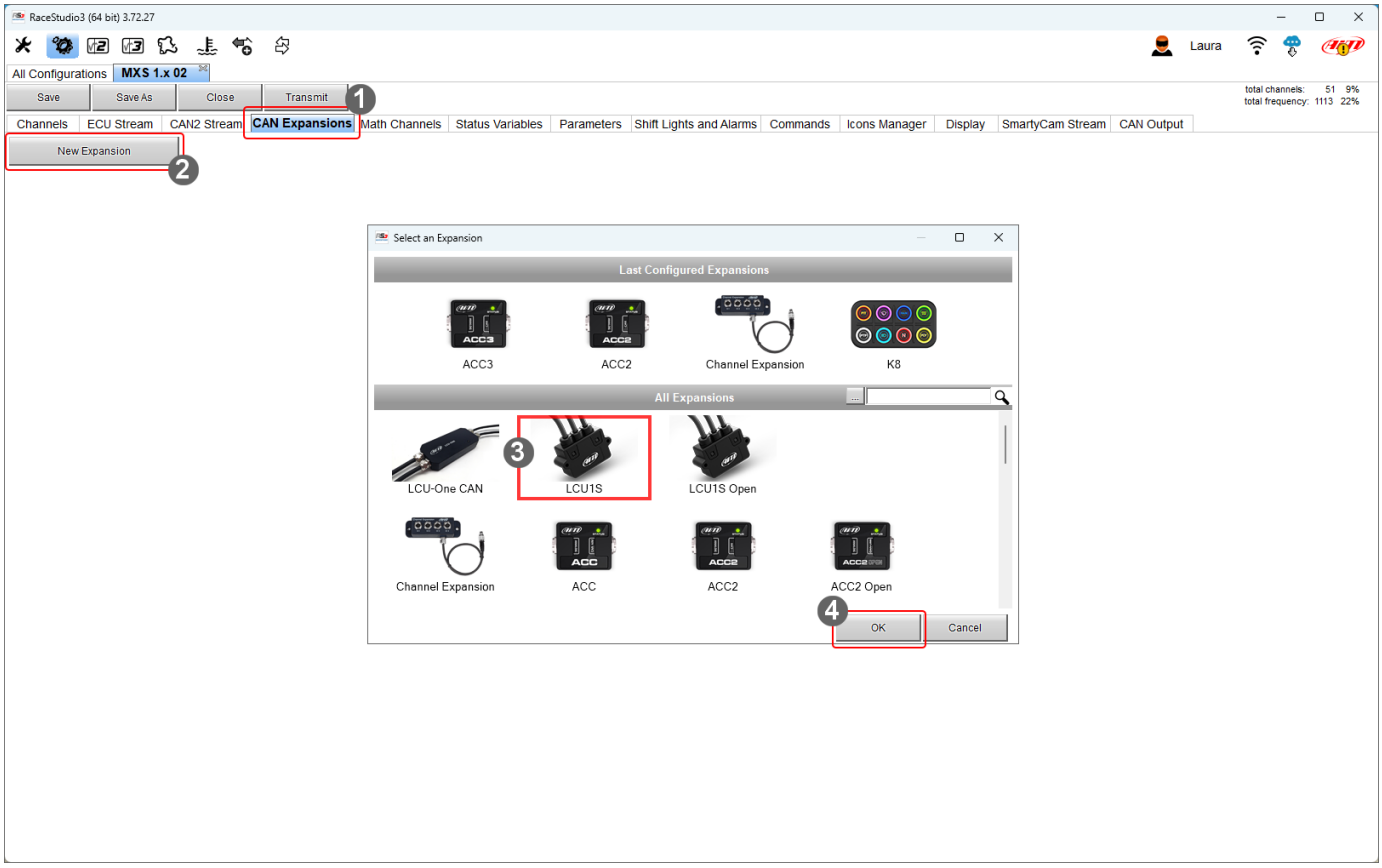

Once the expansion added, the software enters the related tab (0LC1S). Here it is possible to:

- Get the serial number of LCU1S or fill it in manually (**1**); **please note**: to get the serial number from the connected LCU1S it is necessary to power it and connect the master device LCU1S is connected to your PC via Wi-Fi (or via USB). Please refer to the user manual of each logger to know how to manage Wi-Fi connection;
- select the multiplier to calculate AFR from Lambda value
- manage custom values through the dedicated panel that is prompted clicking the proper button

As far as the channel table (**2**) is concerned, clicking on each channel it is possible to set sampling frequency, Unit of measure and display precision.

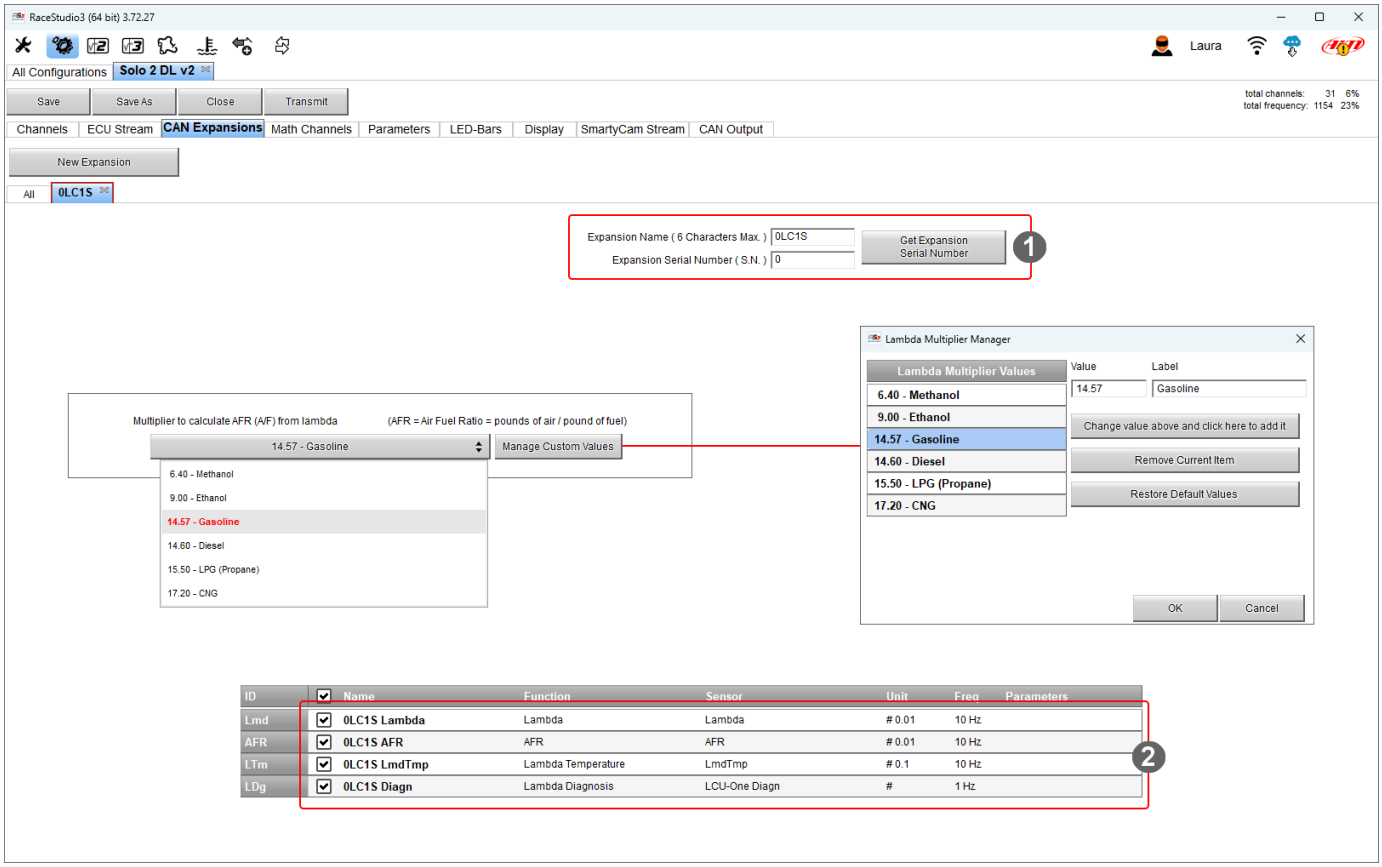

4 – How to get the serial number of a connected LCU1S

To get the serial number of the connected LCU1S ensure that LCU1S is powered and connect the master logger to the PC. To do so:

- click the Wi-Fi icon top right of the software view (or plug the USB cable of the logger in the PC USB port)
- Select the logger to connect via Wi-Fi and press “Connect”.

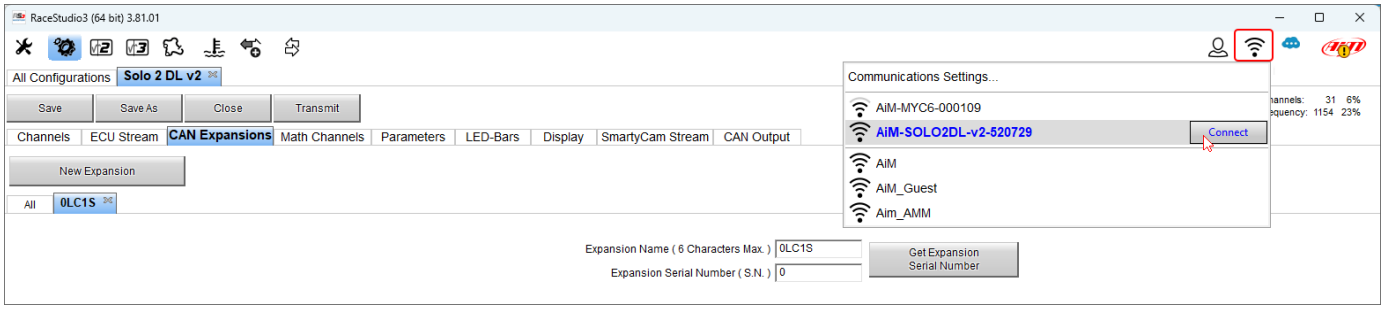

- Once the logger connected press “Get Expansion Serial Number” as shown here below
- A panel is prompted: select the connected expansion to configure and press “OK”

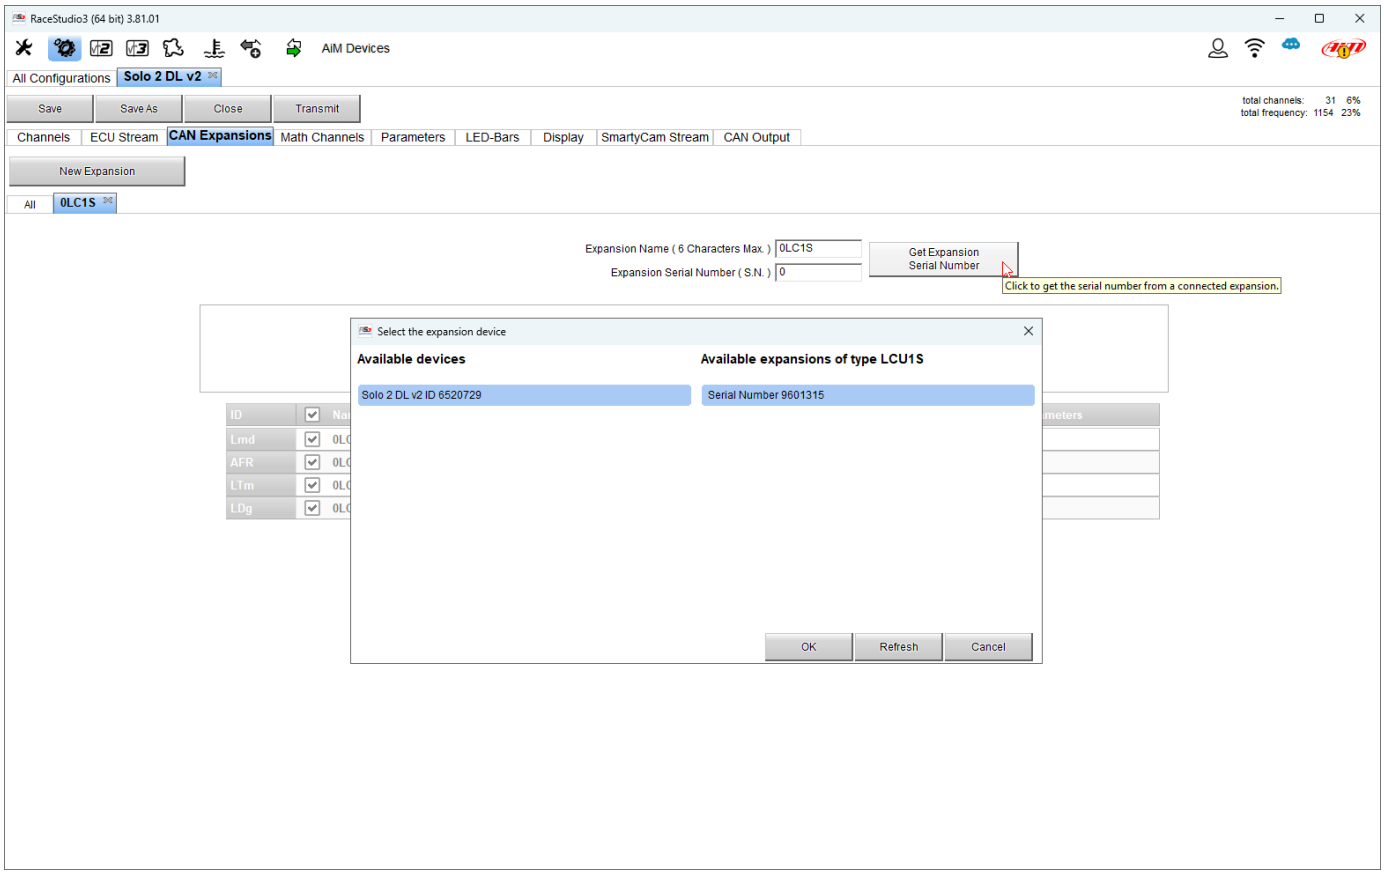

- the software comes back to “CAN Expansions” tab and shows LCU1S Serial number.

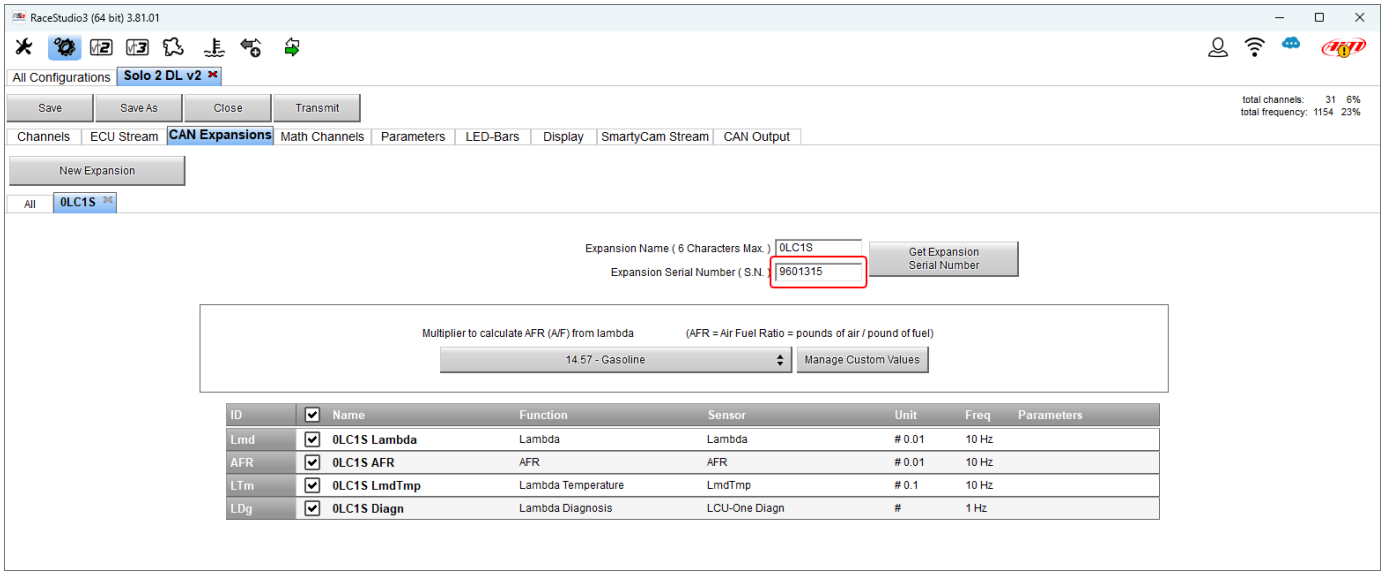

5 – Online view and firmware update

Once LCU1S connected and identified it is suggested to complete, save and transmit the configuration to the logger. This procedure changes according to the logger that is being configured.
Now it is possible to enter online view and check LCU1S values. To do so:

- enter “Configurations” view
- Press the logger you are configuring as shown here below.

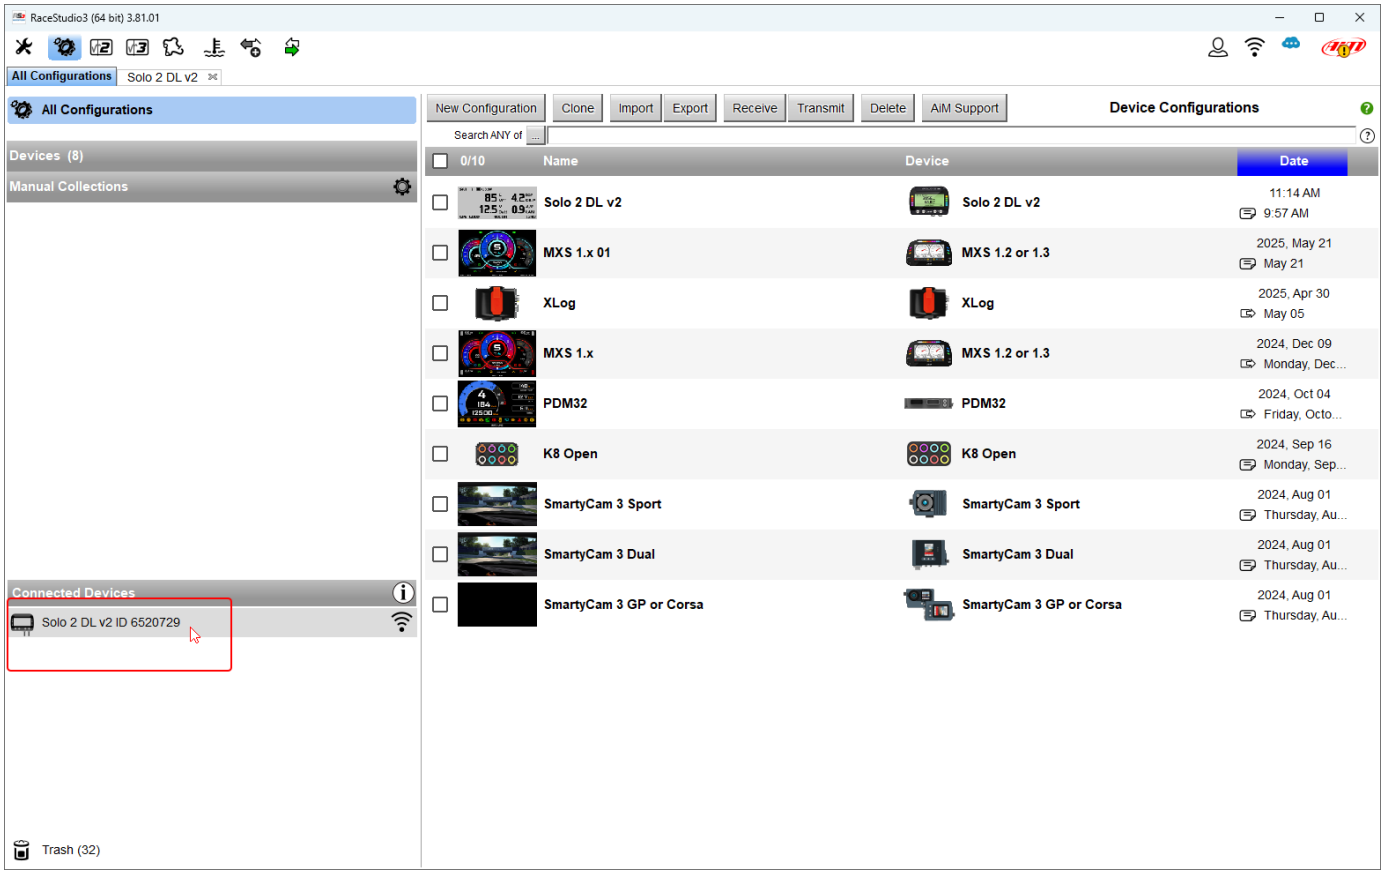

The software enters Online view:

- Activate “Firmware” tab
- The view shows the logger and its expansions on the right part of the view as shown below.

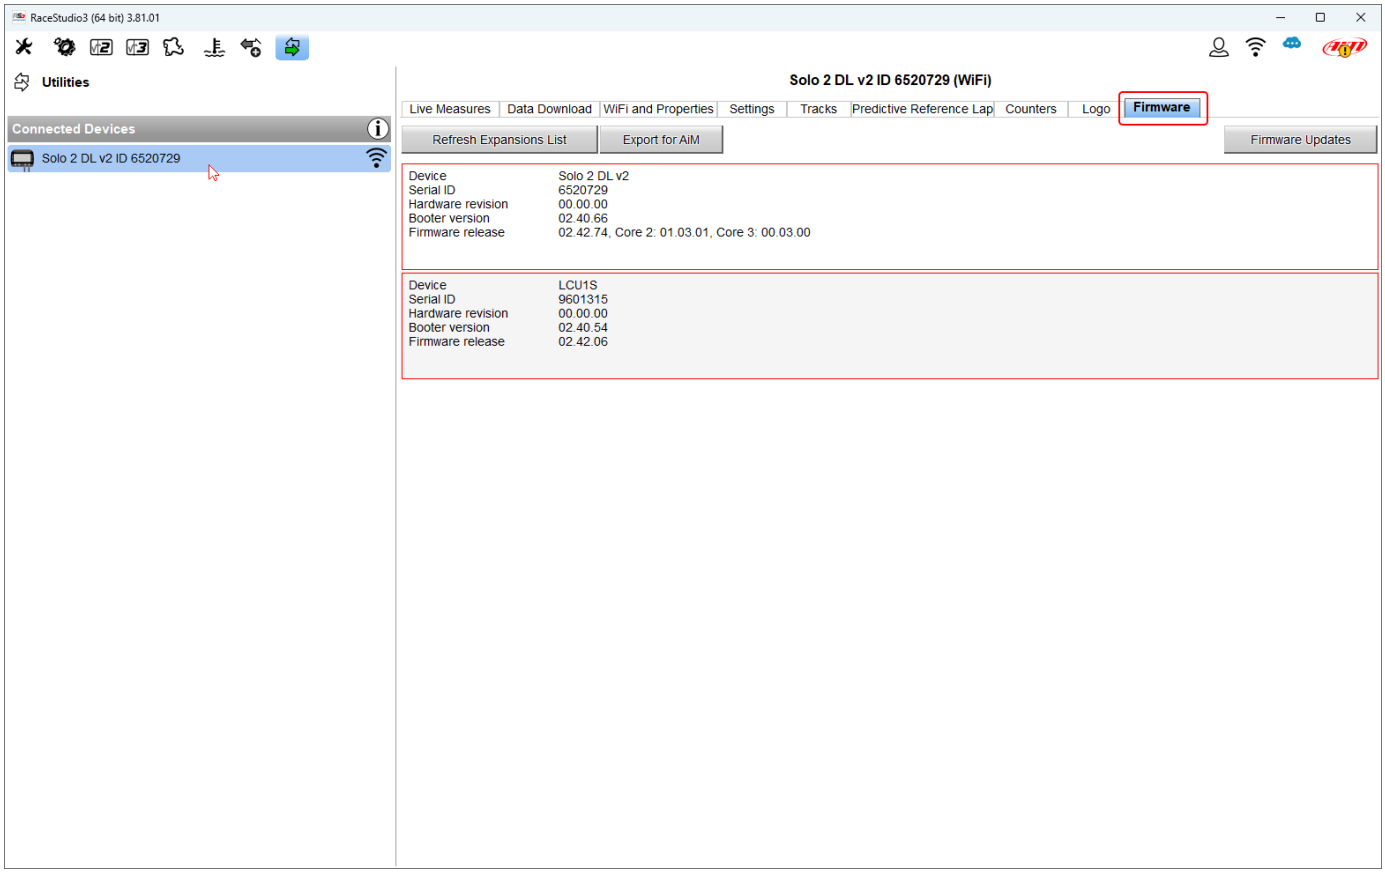

To update both logger and expansions firmware:

- click the related button top right of the view

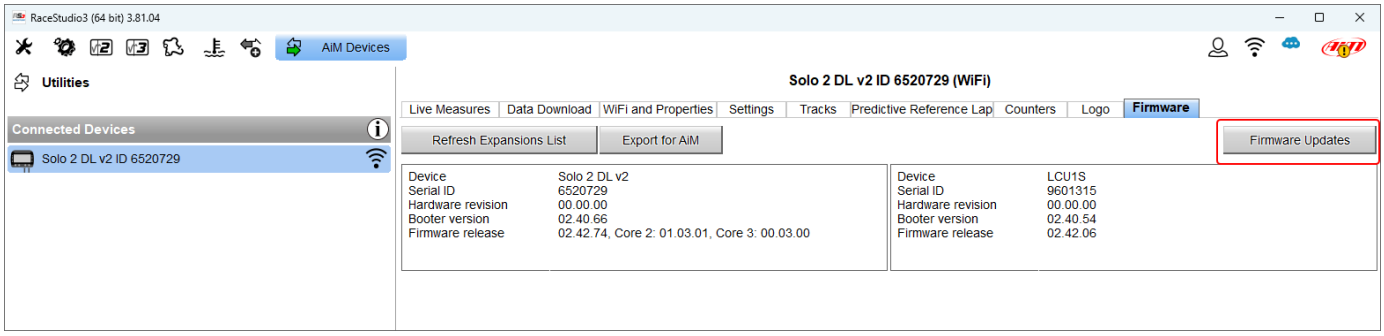

- the software enters firmware update view where it is possible to download and install the firmware as for any AiM device.

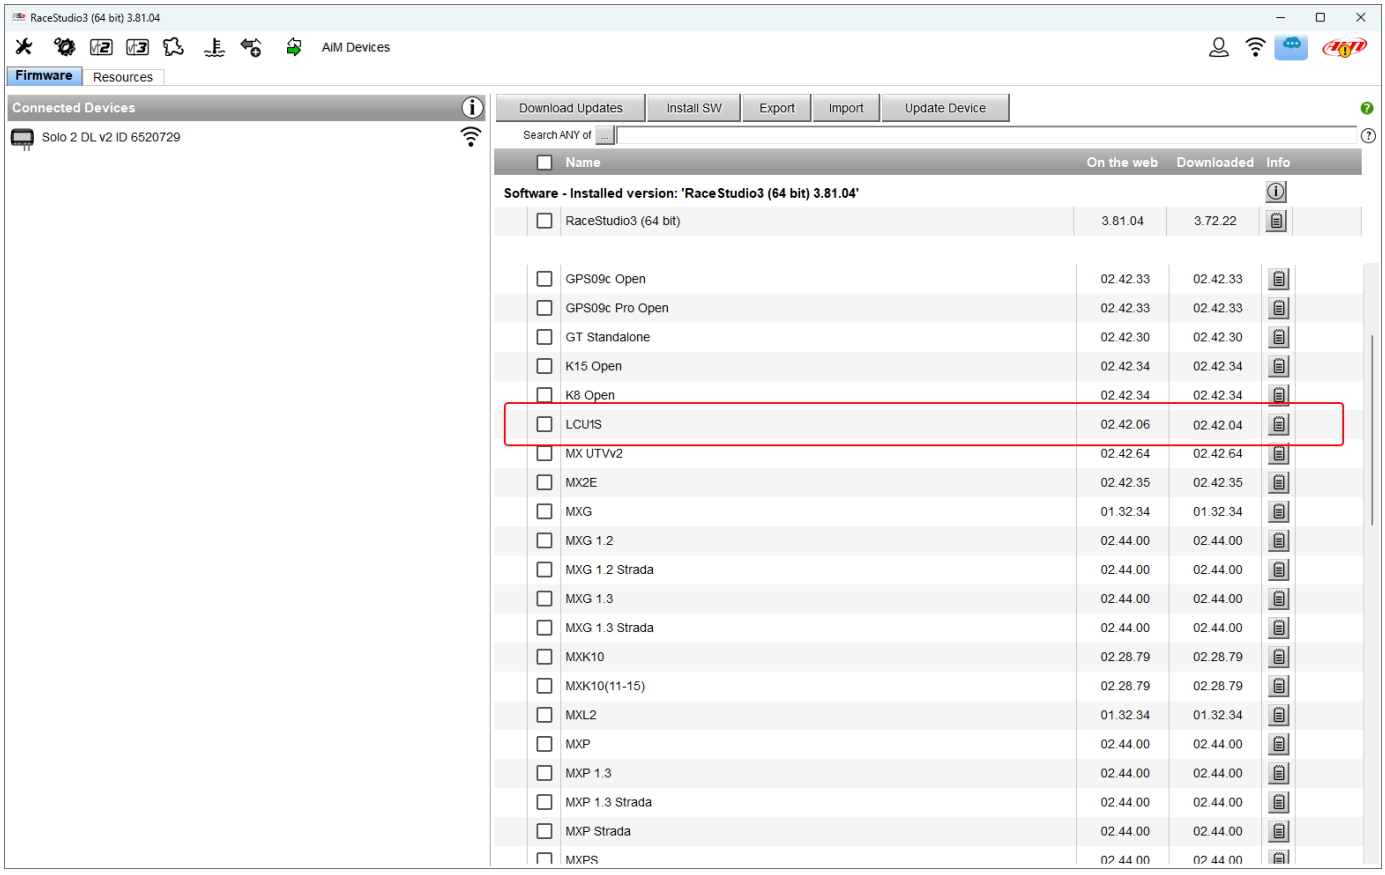

6 – Diagnostic codes in Race Studio Analysis

When LCU1S is connected to any AiM logger, sampled data can be downloaded and analysed.
According to LCU1S status Race Studio Analysis will show some diagnostic codes. Here below are explained their meaning.

- 0 = Unknown [--]
- 1 = OK [OK]
- 2 = WarmUp [WUP]
- 3 = Probe disconnected from controller and circuit open [OPEN]
- 4 = 12V short circuit [SC+12]
- 5 = GND short circuit [SCgnd]
- 6 = Low Voltage on (LCU1S) [LowV]

7 – Technical specifications and drawings

LCU1S technical specifications are:

- Sensor compatibility Bosch LSU4.
- Power supply voltage 9-15V
- Power supply current 50mA ÷ sensor heater typical current 750 mA up to 2A on cold sensor
- Reaction time Less than 10msec
- Material Latigloss 57
- Dimensions 43.4x30x18.4 mm
- Weight 70g
- Waterproof IP67

LCU1S Dimensions in mm [inches]

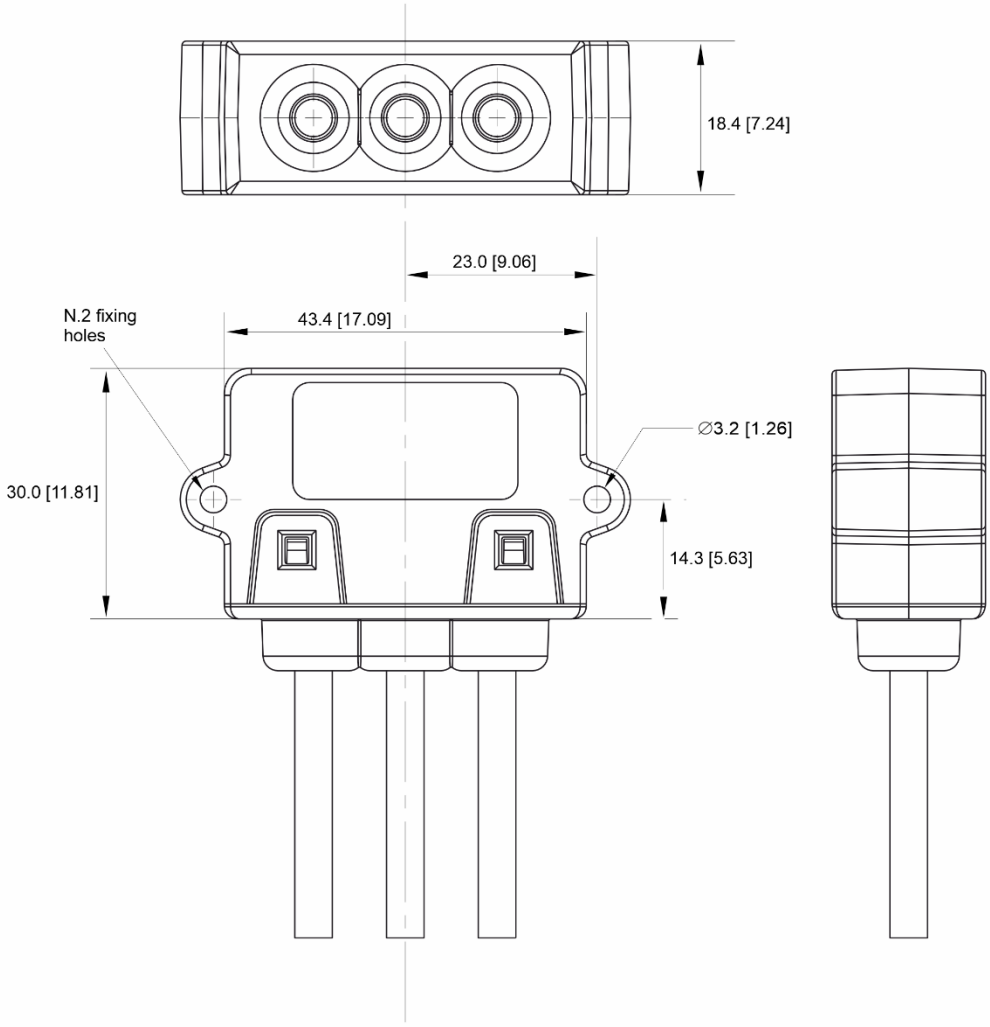

LCU1S Pinout

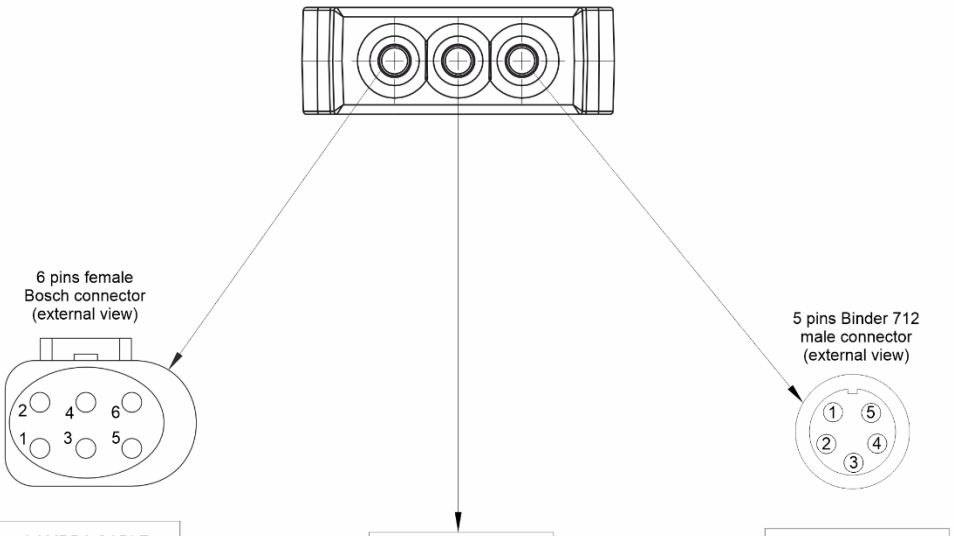

LAMBDA CABLE	
1	IP+
2	IP-/VS
3	H-
4	H+
5	Rcal
6	VS+

POWER CABLE	
Red	V battery
Black	GND

AIM CAN BUS CABLE	
1	AiM CAN+
2	GND
3	+Vb
4	AiM CAN-
5	Vbext

memotec®
Messtechnik

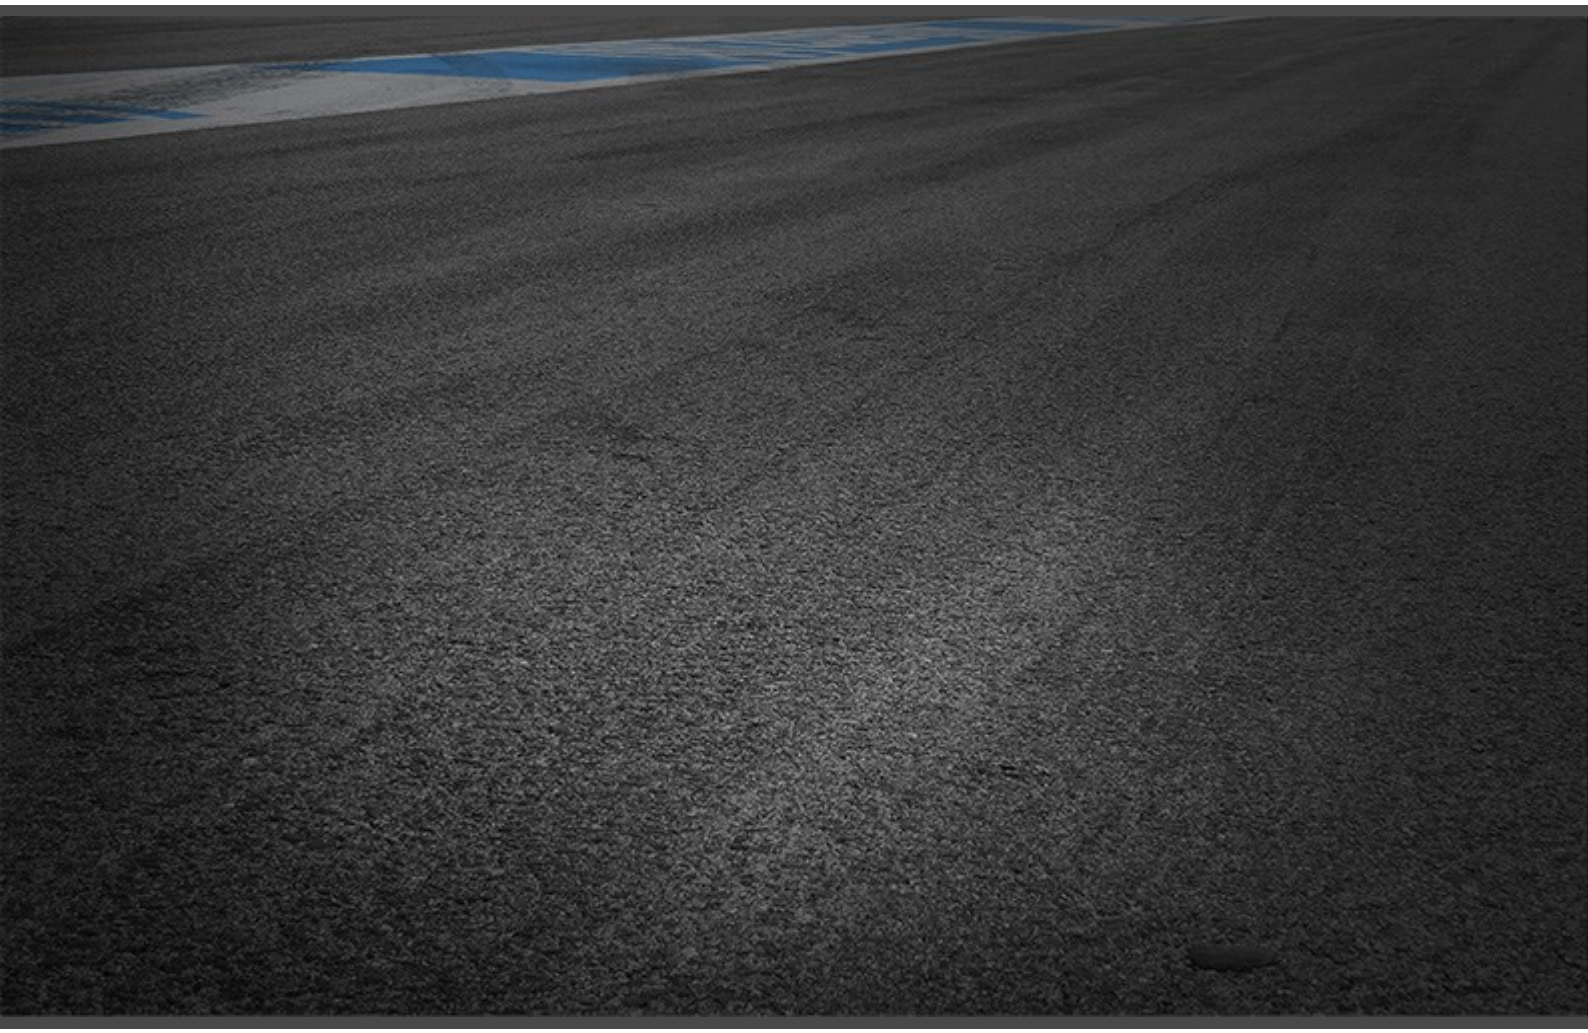

memotec GmbH
Bauwaldstrasse 1
D-75031 Eppingen

+49.7260.920440
info@me-mo-tec.de

www.me-mo-tec.de